

Information Sheet # 43
Generators in Healthcare


*Your Reliable Guide for
Generator Maintenance*

1.0 Introduction:

There are many factors to be considered when specifying backup generators for hospitals or other healthcare facilities where human life would be at risk if primary power was interrupted. Normally comprehensive and detailed supply specifications are written by consulting engineers or architect for public bids. These specifications will reference several codes for life-critical applications.

This Information Sheet discusses the application of backup generator sets for healthcare facilities, and the key factors influencing specifications for generators used in hospitals, nursing homes, and surgery centers for standby power applications: (Continued over)

Healthcare Application Specifications	
Transfer Switch	Switch sized to manage critical load transfers in outages
Fuel	Natural gas or diesel, in some cases LPG
Generator End	Close voltage and frequency stability for equipment loads. PMG for high motor loads.
Noise	Sound attenuation if unit near sensitive areas
Silencers	Hospital grade critical silencers (mufflers)
Vibration Isolators	If located inside/adjacent to facility and in a Seismic Area
Controls	Remote annunciation and auto start controls

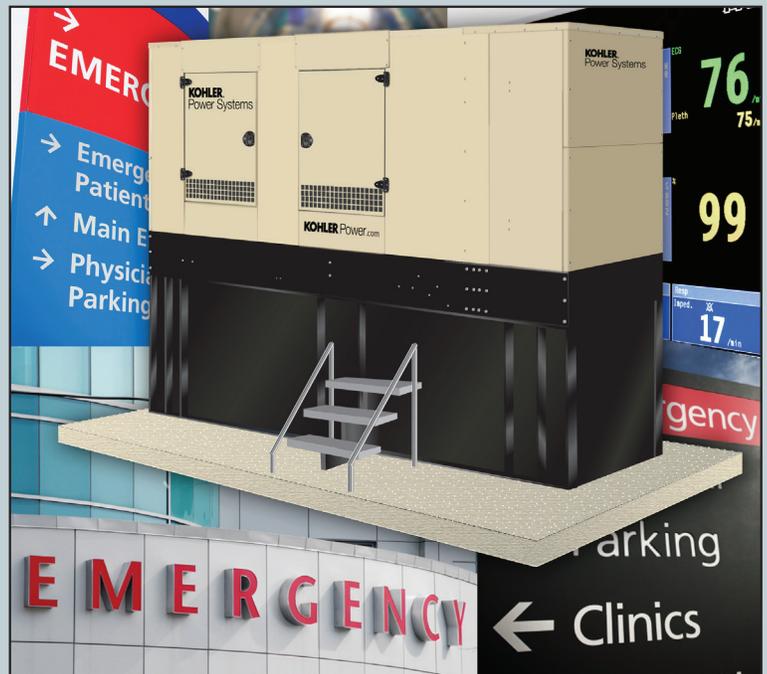

Codes & Standards Specific to Healthcare Generator Applications (see details over)		
NFPA Codes	Code 99 for facilities not supplying life-support	
National Fire Protection Association	Code 110 Levels 1 and Level 2 also for planned maintenance of systems requirements	
	Transfer switches are covered under NFPA 70 National Electrical Code Article 517	
IBC International Building Codes	For areas of seismic activity IBC code ICC-ES-AC-156	
UL Codes Underwriters Laboratories	2200	This covers entire generator set as a manufacturing standard
	142	Applicable to above ground storage tanks to specify leak containment and spillage
	891	Safety criteria applicable to electrical switchgear up to 600 volt systems
	1008	Standard transfer switched are tested and manufactured to
	1558	For low voltage power circuit breakers

To fulfill our commitment to be the leading supplier in the power generation industry, the Loftin Equipment and Bay City Electric Works teams ensures they are always up-to-date with the current power industry standards as well as industry trends. As a service, our **Information Sheets** are circulated on a regular basis to existing and potential power customers to maintain their awareness of changes and developments in standards, codes and technology within the power industry.

The installation information provided in this information sheet is informational in nature only and should not be considered the advice of a properly licensed and qualified electrician or used in place of a detailed review of the applicable National Electric Codes, NFPA 99/110 and local codes. Specific questions about how this information may affect any particular situation should be addressed to a licensed and qualified engineer and/or electrician.

2.0 Location:

For existing hospitals whose standby power capabilities are being upgraded or increased, most generators will be placed outdoors, near the switchgear and load connections. Generator sets for outside locations should be in weather protection enclosures. Frequently enclosures are sound attenuated to minimize or eliminate noise.

New hospital designs may call for the emergency generators to be installed inside the facility. In this case, an unenclosed generator set could be specified with the required vibration isolation mounts in a generator room having the required sound attenuation.

The generator location also must be chosen to minimize the loss of the emergency power service due to flooding, wind damage or other natural calamities, particularly in coastal areas susceptible to storm surges.

It is essential that there is easy access to the unit for technicians to carry out regular planned maintenance and to complete systems testing (load banking) at periodic intervals.

3.0 Stable Electrical Load:

Healthcare system generators need to meet the voltage and frequency limits specified by healthcare equipment loads. In some cases, the generator will be supplying an emergency circuit, not the full load normally supplied by the utility. In this case, system managers will advise the characteristics of the load. Large motor loads such as elevators can effect variations in voltage.

4.0 Controls:

An Automatic Transfer Switch (ATS) is required to automatically transfer the required load to the emergency generator when the utility goes off-line. How quickly the load will be transferred after a utility outage will be specified. When no interruption in power can be tolerated, an Uninterrupted Power System (UPS) will be specified. UPS supplies power while the generator is running up to speed to come on-line. Frequently the specification also will call for the generator to run for a minimum time after the utility power comes back on-line.

NFPA 110 codes require the generator system, including ATS, to be tested weekly on load for a minimum thirty (30) minutes.

5.0 Prime Mover:

Generators for healthcare facilities are frequently powered by diesel engines, but natural gas (NG) or liquid propane gas (LPG) powered generators can be specified for sets smaller than 500kW. Fire codes can require gaseous sets to be located outside the facility.

6.0 Arrangement:

An outside installation requires the generator to be in a weather protecting enclosure. Frequently, the enclosure will be sound attenuated. Other generator arrangements can also include:

- Permanent Magnet Generator (PMG) voltage regulators to manage higher motor starting loads.
- Upgraded automatic voltage regulators (AVR's) to manage SER loads of certain medical testing equipment.
- Normally critical hospital grade silencers are specified with greater attenuation than regular residential silencers.

7.0 Fuel Supply:

The planners' specifications will detail the diesel fuel tank requirements regarding how many hours the unit must run on full load, whether the tanks will be located remote from generator or in a sub-base tank under the generator, and environmental spill requirements. Fuel for gaseous sets will cover LPG storage tanks, or supply and location of NG.

The generator should be fitted with fuel filters including water separators. Planned maintenance programs to NFPA codes address testing of stored diesel supply.

8.0 NFPA Codes Applicable to Generator Systems for Healthcare Facilities:

Life critical installations should be regularly maintained through authorized distributor planned maintenance programs.

9.0 Codes:

US, standby generator sets Healthcare Facilities have to comply with National Fire Protection Association (NFPA) Codes 99 – Standard for Healthcare Facilities (such as nursing homes that do not provide life support), and 110 – Standard for Emergency and Standby Power Systems, Level 1 or Level 2. Level 1 requirements are the most stringent, applied where failure of the standby system could result in loss of human life or serious injury. Level 2 is used where failure is less critical to human life and safety.

10.0 Codes for Generator Systems for Healthcare Facilities in Areas of Seismic Activity:

For Areas of Seismic Activity. Designers of key buildings (commercial and government buildings designated as essential facilities such as hospitals, schools, fire and police stations, and multi-unit housing) in areas of high seismic activity must take into account International Building Codes (IBC) covering building utility systems (e.g. a certified engine driven generator system) which must comply with shake table criteria laid out in Section 1708.5 and test standard IBC code ICC-ES-AC 156. The aim is to ensure that the generator will continue to operate despite seismic and wind related events.

11.0 UL Codes for Generator Systems for Healthcare Facilities in Areas of Seismic Activity:

In addition to the codes set by NFPA and IBC, the following UL codes are applicable to generator systems for healthcare facilities:

- UL 2200 for entire generator set.
- UL 142 for above ground steel fuel tanks.
- UL 891 for safety criteria for electrical switchgear up to 600 volts.
- UL 1008 for automatic transfer switches.
- UL 1558 for low voltage power circuit breakers.



Bay City Main Office - San Diego
13625 Danielson Street
Poway, CA 92064
Ph: 866.938.8200 Toll Free
Fx: 619.938.8202
service@bcw.com

Inland Empire Sales and Service Center
766 South Gifford Avenue
San Bernardino, CA 92408
Ph: 866.938.8200 Toll Free
Fx: 909.890.9258

San Francisco Area Service Center
322 Lindbergh Avenue
Livermore, CA 94551
Ph: 866.938.8200 Toll Free
Fx: 619.938.8216
www.bcw.com



www.loftinequip.com
service@loftinequip.com

Corporate Headquarters
2111 E. Highland Ave. Ste. 255
Phoenix, AZ 85016
Ph: 602.272.9466
Fx: 602.272.7582
Ph: 800.437.4376 Toll Free

Parts & Service- Phoenix
12 N. 45th Avenue
Phoenix, AZ 85043
Ph: 602.272.9466
Fx: 602.272.7582
Ph: 800.437.4376 Toll Free

San Antonio/Austin
1241 University City Blvd.
Universal City, TX 78148
Ph: 210.881.1623
Fx: 210.881.2143
Ph: 866.441.0375 Toll Free

Dallas/Fort Worth
5204 Bear Creek Court
Irving, TX 75061
Ph: 214.237.4566
Fx: 469.359.6018

Las Vegas
701 N. Green Valley Pkwy.
Suite 200
Henderson, NV 89074
Ph: 702.399.7595
Fx: 702.399.7457

Houston
6113 Brittmoore Rd.
Houston, TX 77041
Ph: 281.310.6858
Fx: 281.310.6865
Ph: 800.822.3078 Toll Free